

# Pager Quick Tips

## PAGER TIPS

The user's guide for the DOTS pages can be found on [www.usamobility.com](http://www.usamobility.com). Click on "wireless messaging" then "customer care" at the top of the page. "Users guides" are on the left; select "1 way word guides", then select Sun Telecom Titan III from the choices.

## PAGER QUICK TIPS



1. Large button on the right.
  - Turns the pager on and off.
  - Push to receive messages
  - Activate your selection
  - Adjust time, alarm, and date functions
2. Middle Button with the dot in it.
  - Enter the function menu
  - Exit the function menu
  - turn backlight on or off.
3. Buttons on either side of the middle button.
  - navigate through the menus and messages
  - navigate through time, alarm and date setting.
4. **ON-** Press the far right button for two seconds.
5. **OFF-** Press the button with the dot on it. From the main screen Push any button to get to the function screen. Use the navigation buttons to go to the pager off icon. Press the button on the far right. When you see the "turn pager off?" display press the far right button again.
6. **Setting the alert.** From the on position press any key to get to the message screen. Press the button with the dot in it and the functions should appear. Use the nav buttons on either side of the button with the dot in it to go to the icon that displays "**Set Alert**" and press the far right button. Use the nav buttons to go to the desired alert. Press the far right button to activate the alert.
7. **Reading a Message.** Go to the main screen. The main screen has the man icon, the envelope icon and the notepad icon. Use the nav buttons to move to the message screen you want to read. Press the far right button to enter the folder. Use the nav button to move between messages and when you have the message you want to read press the far right button to read the message.
8. **Deleting Messages.** From the message screen. Press the button with the dot in it. Using the nav. buttons move to show "**Delete**". Press the far right button to activate the delete.
9. **Turning sound off.** From the main screen. Press any button to get to the function screen. Use the nav. button to move to the icon that Displays "**Audible ON/Off**" If the picture of the speaker has a /-slash through the sound is off. Press the far right button to activate the setting you want.